

# Pairing Bluetooth Headset


This document outlines the process, specifically, for pairing a Sangoma phone with one of the standard supplied MPOW headsets.

## On The Sangoma Phone


1. Press the Menu button on the bottom right of the main display screen




2. Use the arrow navigation panel to navigate to the **Settings** option, and press Enter (or the check mark button in the center of the navigation arrow keys)

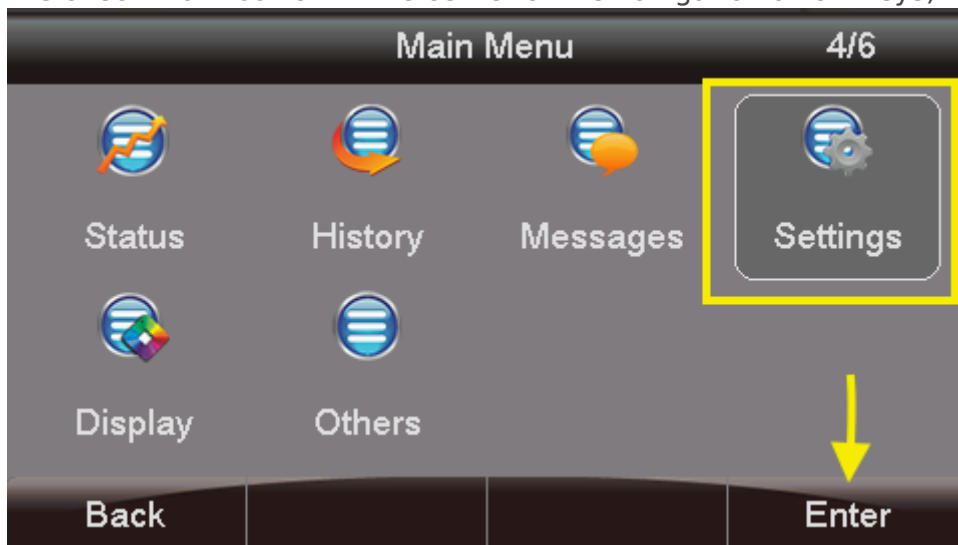


3. Select **Basic Settings** and press **Enter**

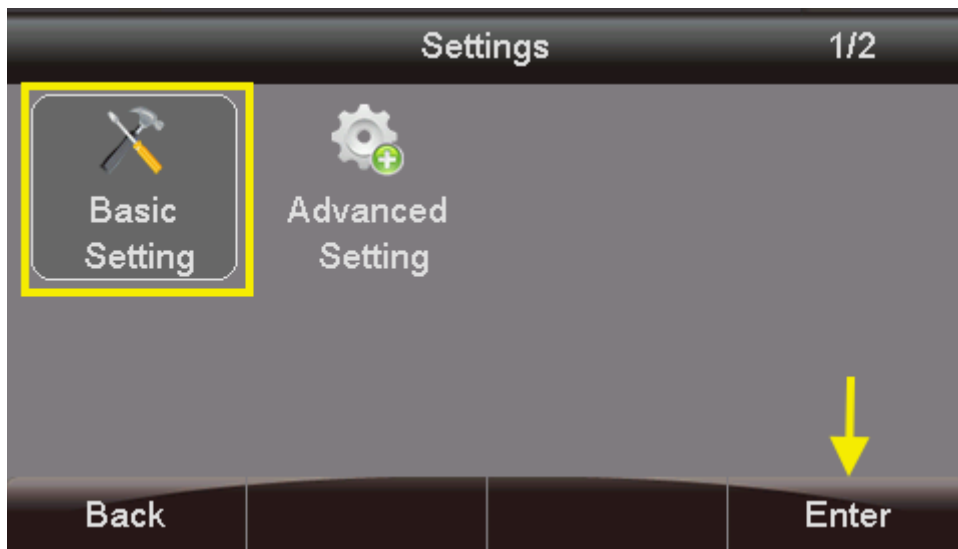

4. Navigate down to the **Bluetooth** menu option and press **Enter**

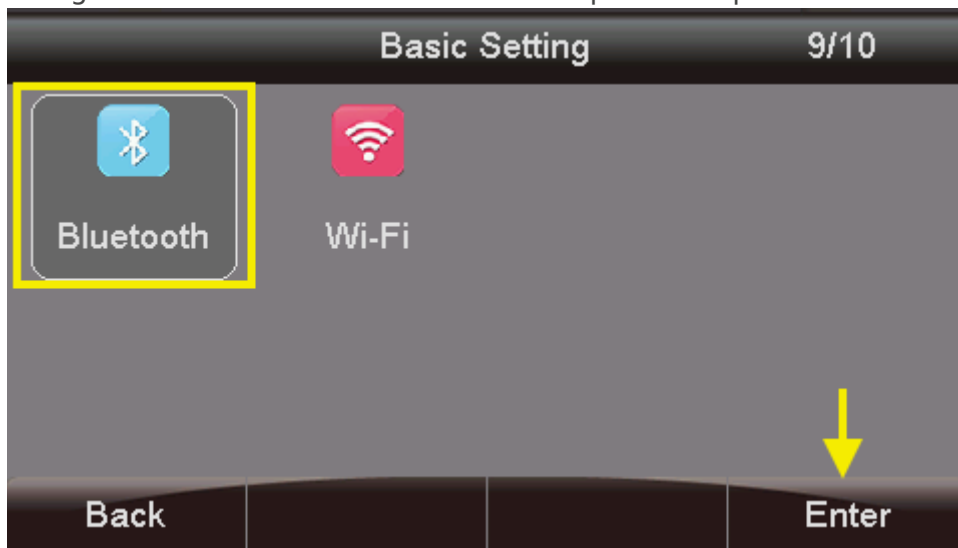

5. On this screen, if the phone says that bluetooth is on, follow the next sub-steps, otherwise skip to step 6
  1. Press the **Switch** option to turn bluetooth on
  2. Press the **Save** button to ensure that bluetooth is on

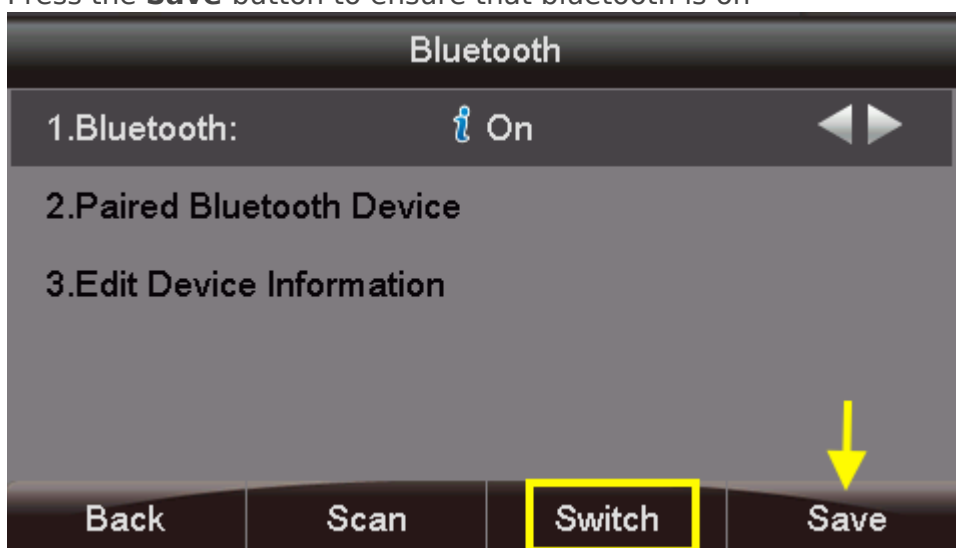


3. Press the **Back** button to return to the menu screen and action the save
4. Select the **Bluetooth** menu option

6.


button until the indicator light



7. Select option #2 **Paired Bluetooth Device** and press the **Scan** button on the bottom of the phone screen

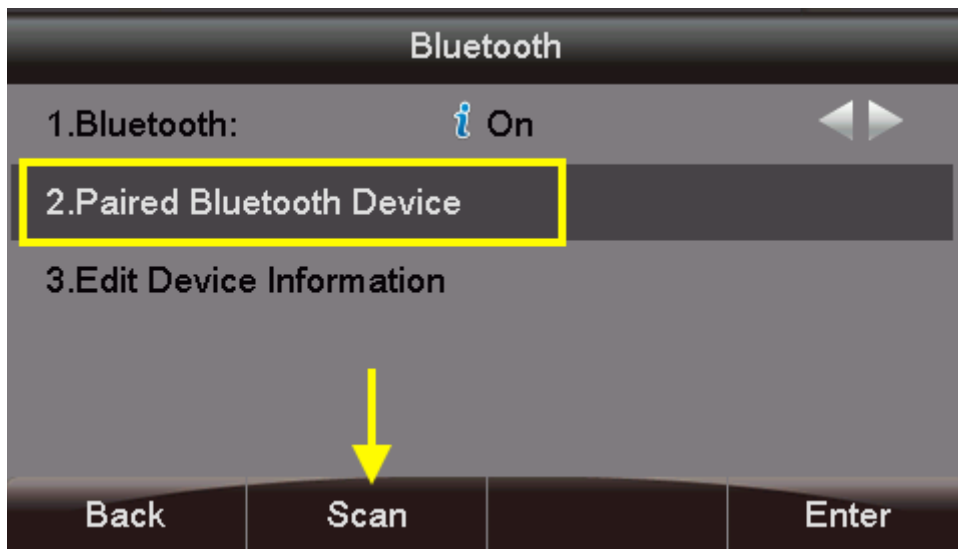


8. The phone will look for any bluetooth devices looking to pair. An MPOW device should show up.
9. Press the **Connect** button on the bottom right of the phone

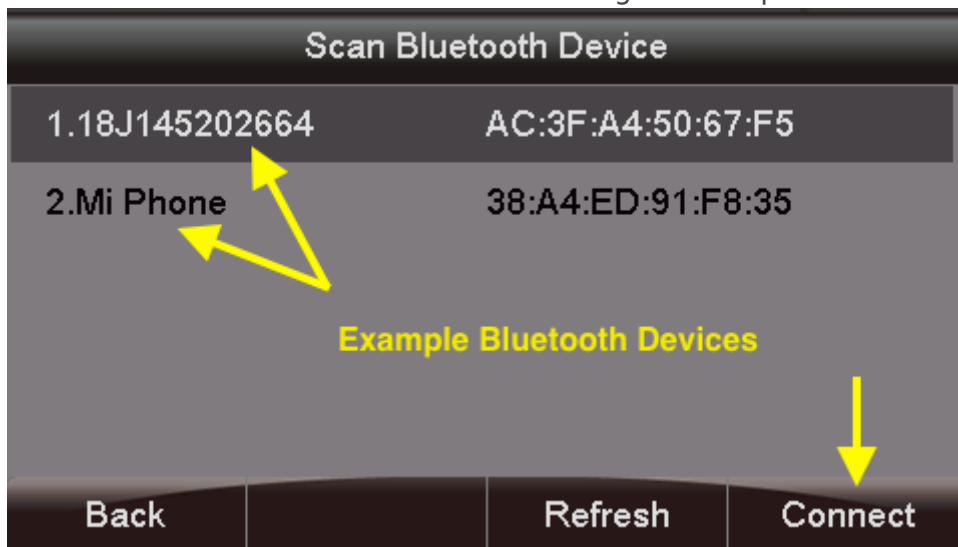

10. When you return to the main screen, the phone should now indicate that there is a bluetooth device connected



You also need to ensure that you have activated headset mode on your phone. This is done by pressing the  button on the phone

---

Revision #1

Created 25 February 2019 14:53:27 by Jim

Updated 26 October 2021 20:12:18 by Jim