

Pairing Bluetooth Headset


This document outlines the process, specifically, for pairing a Sangoma phone with one of the standard supplied MPOW headsets.

On The Sangoma Phone


1. Press the Menu button on the bottom right of the main display screen




2. Use the arrow navigation panel to navigate to the **Settings** option, and press Enter (or the check mark button in the center of the navigation arrow keys)

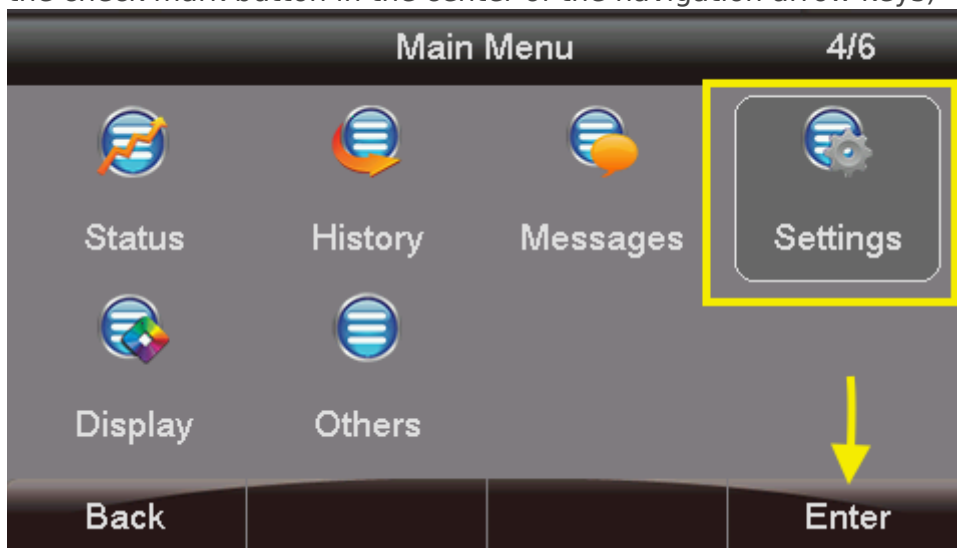


3. Select **Basic Settings** and press **Enter**

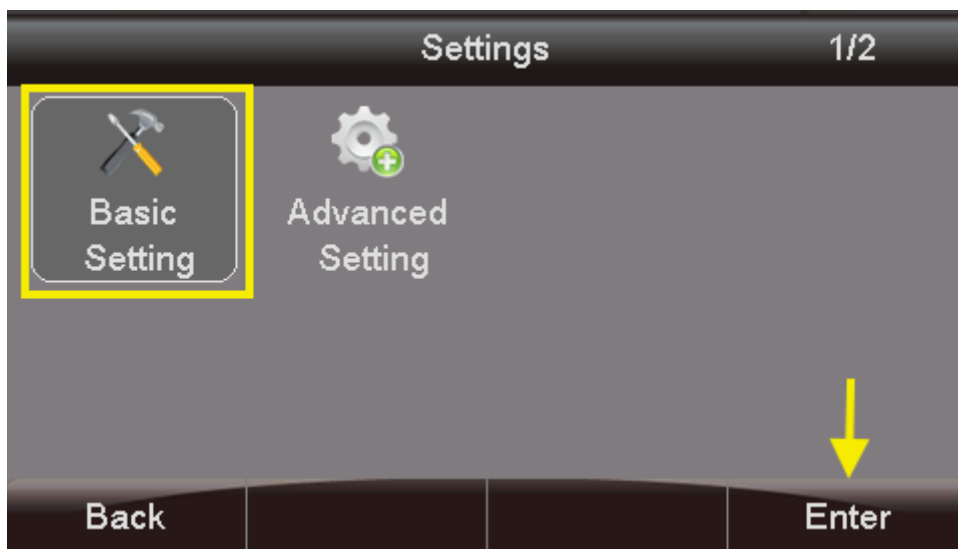

4. Navigate down to the **Bluetooth** menu option and press **Enter**

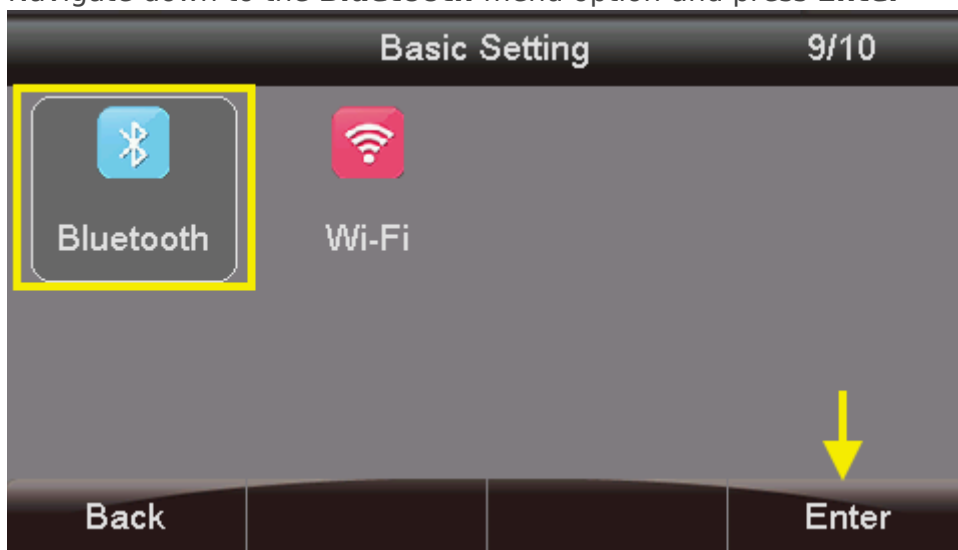

5. On this screen, if the phone says that bluetooth is on, follow the next sub-steps, otherwise skip to step 6
 1. Press the **Switch** option to turn bluetooth on
 2. Press the **Save** button to ensure that bluetooth is on

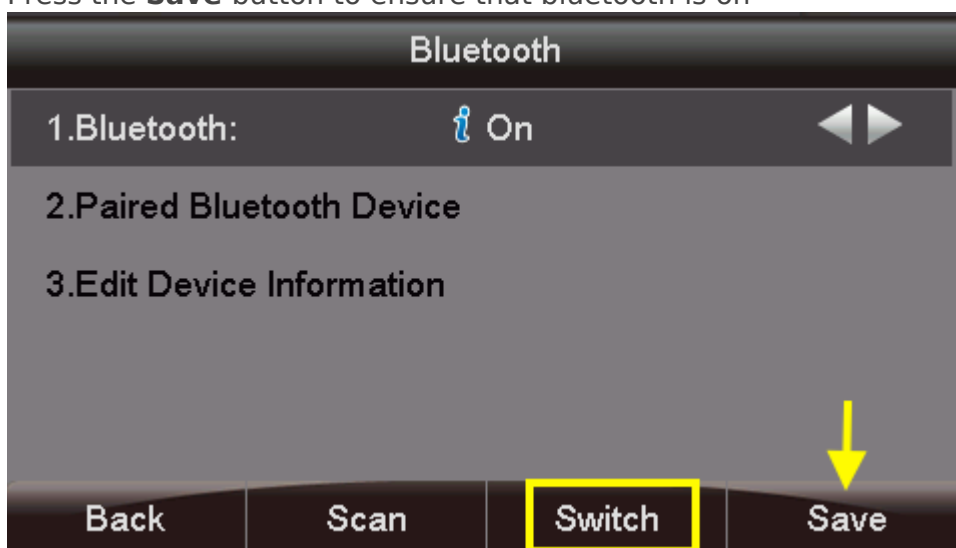


3. Press the **Back** button to return to the menu screen and action the save
4. Select the **Bluetooth** menu option

6.


button until the indicator light



7. Select option #2 **Paired Bluetooth Device** and press the **Scan** button on the bottom of the phone screen

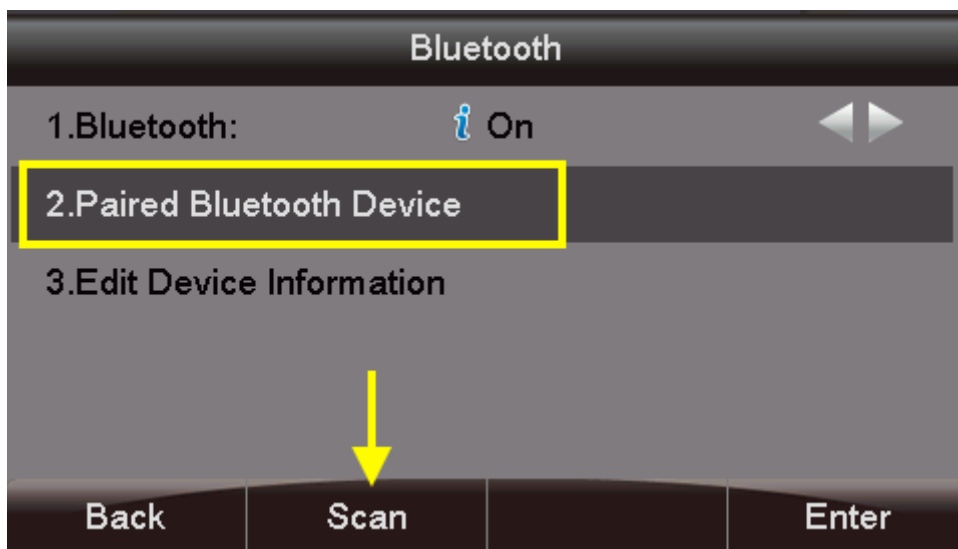


8. The phone will look for any bluetooth devices looking to pair. An MPOW device should show up.
9. Press the **Connect** button on the bottom right of the phone

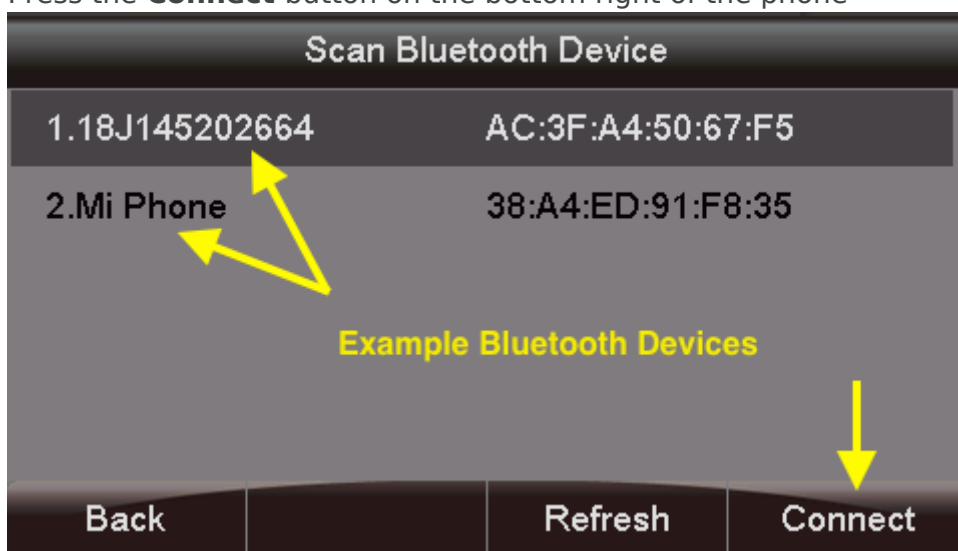

10. When you return to the main screen, the phone should now indicate that there is a bluetooth device connected



You also need to ensure that you have activated headset mode on your phone. This is done by pressing the  button on the phone

Revision #1

Created 2019-02-25 14:53:27 UTC by Jim

Updated 2021-10-26 20:12:18 UTC by Jim